



INSTRUCTION MANUAL



PLATINUM SERIES

**AVI45PLATINUM – AVI60PLATINUM – AVI72PLATINUM – AVI78PLATINUM –
AVI88PLATINUM AVI98PLATINUM – AVI105PLATINUM – AVI122PLATINUM –
AVI178PLATINUM – AVI6075PLATINUM**

**BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY AND
OPERATING INSTRUCTIONS.**

1. SAFETY INSTRUCTIONS	2
2. RATING PLATE	6
3. PRODUCT DESCRIPTION	6
4. INSTALLATION INSTRUCTIONS	7
5. OPERATING INSTRUCTIONS	12
6. CLEANING AND MAINTENANCE	26
7. IN THE EVENT OF A FAULT	27
8. TROUBLESHOOTING	28
9. ENVIRONMENT	29
10. DISCLAIMER	29

1. SAFETY INSTRUCTIONS

For your safety and to ensure correct use of the appliance, read this manual carefully, including its warnings and useful tips, before installing and using the appliance for the first time. To avoid unnecessary damage to the appliance and/or injury, it is important that everyone who uses the appliance is fully familiar with how it works and with its safety features. Keep these instructions for future reference and store them with the appliance so that they can be passed on with it if it is sold or moved. This will help to ensure that the appliance operates optimally.

Keep this manual to avoid any risk of injury. The manufacturer cannot be held liable if the appliance is handled incorrectly.

Safety of children and other vulnerable people

- This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they are supervised by a responsible person who is aware of the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years and supervised.
- Keep all packaging away from children. There is a risk of suffocation.
- If you dispose of the appliance, unplug it from the wall socket, cut the power cable (as close to the appliance as possible) and remove the door to prevent children from playing with it and getting an electric shock or becoming trapped inside.
- If this appliance, which has a magnetic door seal, replaces an older appliance with a latch on the door or door seal, make sure that the latch is unusable before you dispose of the old appliance. This prevents the old appliance from becoming a trap for children.
- Keep the appliance and its power cable out of the reach of children under 8 years of age.
- Children must not load or unload bottles in the appliance.

General safety

CAUTION – This appliance is intended for use in households and in similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- bed and breakfast type environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- catering and similar non-retail applications.

CAUTION – Never store flammable substances such as aerosol cans in this appliance, as they may leak inside it.

CAUTION – If the power cable is damaged, it must be replaced immediately by the manufacturer or a qualified dealer to avoid the risk of electric shock.

CAUTION – Keep the ventilation openings fully clear and make sure that air can circulate freely through them.

CAUTION – Do not damage the refrigerant circuit.

CAUTION – Do not use electrical appliances inside the storage compartment unless they are approved by the manufacturer.

CAUTION – The refrigerant and the insulation contain flammable gases. When disposing of the appliance, take it to an authorised collection point. Never expose the appliance to naked flames.

Refrigerant

The refrigerant circuit of the appliance contains isobutane (R600a), a highly flammable natural gas that is not harmful to the environment. During transport and installation, make sure that none of the components of the refrigerant circuit is damaged. The refrigerant (R600a) is flammable.

Caution: risk of fire

If the refrigerant circuit is damaged:

- Avoid naked flames and sources of ignition.
- Ventilate the room in which the appliance is located thoroughly. It is dangerous to alter the specifications of this product or to modify it in any way.

Any damage to the power cable may cause a short circuit, fire and/or electric shock.

Electrical safety

- We decline all liability for incidents caused by a faulty electrical installation.
- The power cable must not be extended. Do not use an extension cable, adapter or multi-way socket.
- Make sure that the plug is not squashed or damaged. A squashed or damaged plug may over-heat and cause a fire.
- Make sure that you can reach the mains plug of the appliance.
- Do not pull on the power cable.
- Make sure that the appliance is always earthed.
- If the wall socket is loose, do not insert the plug. There is a risk of electric shock or fire.
- Do not operate the appliance without the interior light cover.
- Unplug the appliance before replacing the light bulb.
- The wine cabinet must only be connected to a single-phase alternating current supply of 220~240V/50Hz.
- Do not attempt to replace a damaged power cable yourself; contact your after-sales service.
- The wall socket must be easily accessible but out of the reach of children. If in doubt, contact your installer.
- Do not connect the appliance using an extension cable, adapter or multi-way socket. The appliance must be connected to an earthed socket in accordance with current electrical regulations.

Daily use

- This appliance is intended exclusively for storing wine.
- Do not store flammable gases or liquids in the appliance. There is a risk of explosion.
- Do not operate other electrical appliances inside the appliance (electric ice-cream makers, mixers, etc.).
- When unplugging the appliance, always pull the plug out of the socket; do not pull on the cable.
- Do not place hot items near the plastic parts of the appliance.
- Strictly follow the manufacturer's storage recommendations. Refer to the relevant storage instructions.
- Do not expose the appliance to direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance to avoid the risk of fire.

- This appliance is intended for storing beverages in a normal household, as described in this instruction manual.
- The appliance is heavy. Take care when moving it. If your appliance is fitted with castors, remember that they are only designed for short movements. Do not move the appliance over long distances.
- Never use the shelves, drawers, doors, etc. to stand on or as a support.
- To prevent items from falling and causing injury or damage to the appliance, do not overload the shelves and do not store food in the appliance.

Caution: cleaning and maintenance

- Before carrying out any maintenance, switch off the power supply and unplug the appliance.
- Do not clean the appliance with metal objects, steam cleaners, volatile oils, organic solvents or abrasive cleaners.
- Never clean parts of the appliance with flammable liquids. The fumes can create a risk of fire or explosion.
- Do not use sharp or pointed objects to remove frost. Use a plastic scraper.

Important installation information

- **Warning! To prevent the wine cabinet from tipping over, always fill the spaces at the back of the wine cabinet first. Never pull out several shelves at the same time or leave them pulled out. The weight of the bottles can cause the wine cabinet to tip forwards, so it is essential to distribute the weight of the bottles evenly throughout the wine cabinet and to handle it with care.**

To ensure that the electrical connection is correct, follow the instructions in this manual.

- Unpack the appliance and check it for visible damage. Do not plug in the appliance if it is damaged. Report any damage to the retailer where you bought it. In this case, keep the packaging.
- We recommend waiting at least 24 hours before connecting the appliance to the mains, so that the oil can settle back into the compressor.
- Good air circulation is necessary to prevent overheating. To ensure sufficient ventilation, follow the installation instructions carefully.
- Make sure that the socket remains accessible once the appliance has been installed.
- Take care not to trap or damage the power cable when installing the appliance.

Troubleshooting and spare parts

Any electrical work must be carried out by a qualified and competent technician.

The appliance must be repaired by an authorised repair centre, using only the manufacturer's original spare parts.

Cosmetic and functional spare parts in accordance with REGULATION (EU) 2019/2019 (Annex II, point 3.) are available to professional repairers and end users for a period of 7 years or 10 years (list in Annex II, points 3.a.1 and 3.a.2) from the date on which the last unit of the model is placed on the market. The list of spare parts and the ordering procedure (professional access / private customer access) are available on the following website: www.interfroidservices.fr or by post from the following address: FRIO - Interfroid Services, 143 Bd Pierre Lefauchaux - 72230 ARNAGE

Other functional spare parts not specified in EU Regulation 2019/2019 are available for a period of 10 years. The manufacturer's warranty on functional parts is 1 year.

**R600a****Safety instructions**

- Caution — Do not obstruct the ventilation grilles of the appliance. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.



- Caution — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



- Caution — Do not damage the refrigerant circuit of the appliance.



- Caution — The refrigeration units use isobutane (R600a) and must not be placed near sources of ignition (for example, unsealed electrical contacts) or where refrigerant could accumulate in the event of a leak. The refrigerant type is stated on the rating plate of the appliance.



- Caution — Do not use electrical appliances inside the storage compartments of the appliance unless they are of the type recommended by the manufacturer.

This appliance complies with all applicable European directives and their amendments.



FR



+



+



+



2. RATING PLATE

The rating plate, located inside or at the back of the appliance (depending on the model), contains all the information specific to your appliance.

We recommend that you write down its serial number in this manual before installation, so that you can refer to it later if necessary (technical service, requests for assistance, etc.).



Once the appliance has been installed and loaded, the rating plate is more difficult to access.

CAUTION: we cannot provide any assistance without this information.

3. PRODUCT DESCRIPTION

To find out more about your product, consult the online EPREL database. As defined in Commission Delegated Regulation (EU) 2019/2016, all information relating to this refrigerating appliance is available in the EPREL database (European Product Registry for Energy Labelling). This database lets you consult the information and technical documentation for your refrigerating appliance. You can access the EPREL database by scanning the QR code on the energy label of your appliance or by going directly to www.ec.europa.eu and searching for the model reference of your refrigerating appliance.

Stated capacity

The bottle loading diagrams can be found at the end of this manual.

The stated capacity is the maximum capacity, calculated with the number of shelves supplied with the wine cabinet and 75 cl Bordeaux bottles in accordance with standard EN62552:2013, with the bottles stored head to tail.

The shelves of Platinum wine cabinets are designed to hold several bottle shapes, such as Bordeaux, Champagne and Burgundy.

If you wish to store bottles of different shapes, we recommend placing a standard Bordeaux bottle between your larger bottles. This will help you avoid storage problems.

Placing unusually shaped or large bottles next to each other may mean that you can only use some of the spaces on the shelf. Alternating a standard bottle (Bordeaux 75 cl) with an unusually shaped or large bottle will allow you to use all the available spaces on the shelf.

[Refer to the bottle loading diagrams at the end of this manual.](#)

Layout recommendations

The original layout of the interior fittings (shelves, etc.) is recommended to ensure that the appliance uses energy as efficiently as possible. Any change to this layout may affect the energy consumption of the appliance.

4. INSTALLATION INSTRUCTIONS

Before using your wine cabinet

- Remove all outer and inner packaging.
- Leave the appliance standing upright for about 24 hours before switching it on. This reduces the risk of a malfunction in the cooling system caused by transport.
- Clean the inside with a soft cloth and lukewarm water.
- When installing the appliance, choose a suitable location.
- Place the wine cabinet on a floor that is strong enough to support it when fully loaded.
- To ensure that the door closes properly, the wine cabinet must be level; adjust the 4 adjustable feet if necessary. This adjustment also keeps the drawers or shelves in place despite the weight of the bottles. Adequate ventilation is necessary; do not obstruct any air outlets.
- This appliance is intended only for storing wine.
- This appliance contains flammable refrigerant gas, so never damage the pipes of the refrigerant circuit during transport.

Important

- Only store closed bottles.
- Do not overload the appliance.
- Do not open the door more often than necessary.
- Do not cover the shelves with aluminium foil or any other material that may obstruct air circulation.
- If the wine cabinet is to be left empty for a long period, we recommend unplugging it, cleaning it thoroughly and leaving the door ajar to allow air to circulate inside and to prevent condensation, mould and odours.
- **CAUTION: keep the appliance away from any substances that could cause a fire.**

Installing your wine cabinet

Refer to the installation diagrams at the end of this manual.




If the appliance is not installed correctly, the door-opening system will not work properly. Make sure that you follow the instructions above.

Products in the PLATINUM range have a self-ventilation system. Top and bottom ventilation openings in the appliance column are therefore no longer required.

Electronic push-pull opening system

Touch the opening area gently and wait a few seconds for the opening system to activate. It is normal for there to be a delay between the moment you place your hand on the upper left area of the wine cabinet and the moment the door opens.

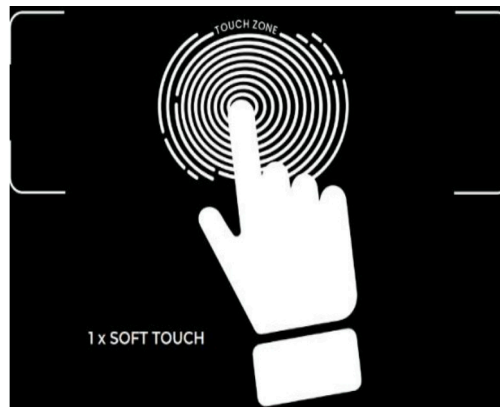


The system is electronic and does not require any adjustment.

Door reversal


To reverse the opening direction of the door, which opens from left to right as supplied (handle on the left), proceed as follows.

Keep all removed parts, as you will need them to refit the door.


1. Remove the top and bottom covers on the back of the door by hand. Undo the 3 screws of the PCB (door switch) in the top compartment.

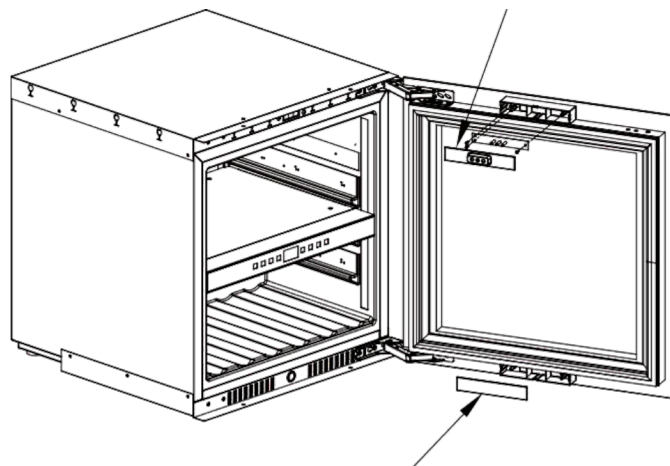


2. Fit the PCB (door switch) and the top compartment cover at the bottom, and fit the bottom compartment cover at the top.

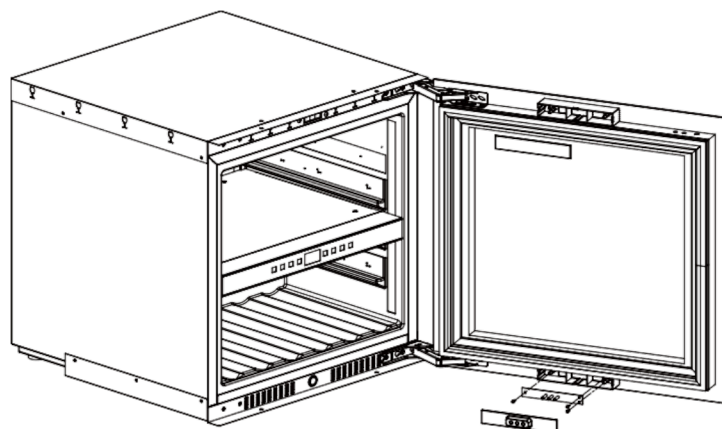


3. Remove the top and bottom screw covers on the left-hand side and unscrew the pantograph hinges from the wine cabinet. (DO NOT TOUCH THE SCREWS BETWEEN THE HINGES AND THE DOOR)

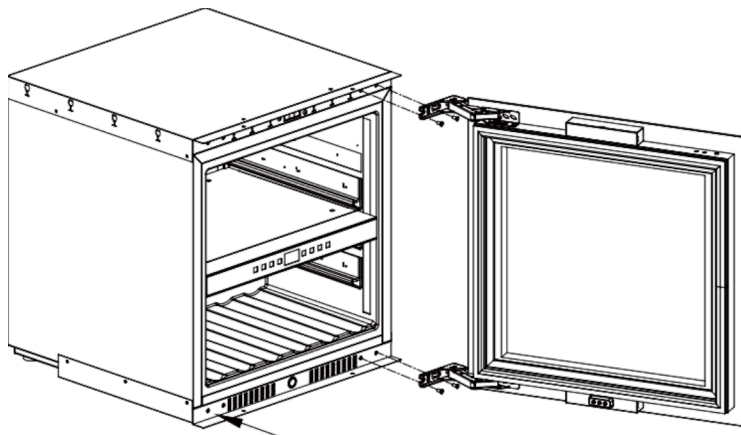


4. Lift the glass door, taking all necessary precautions, and carefully turn it through 180°. Make sure that the PCB (door switch) is at the top of the door.

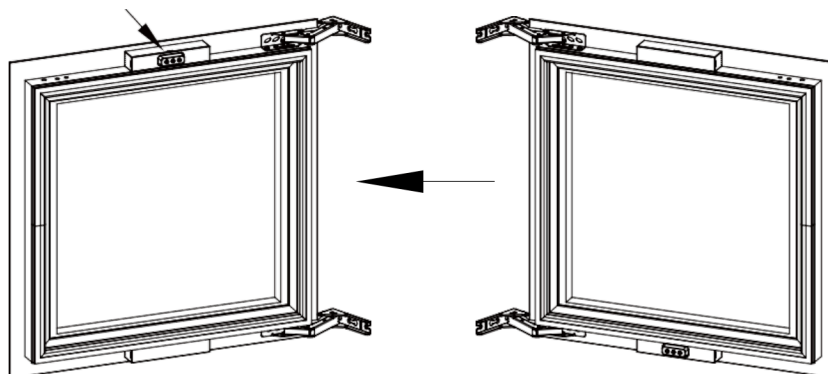

5. Insert the screws into the holes on the left-hand side, leaving a gap of 5 mm. Then fit the hinge holes of the door over the screws, position the door and tighten the screws firmly.

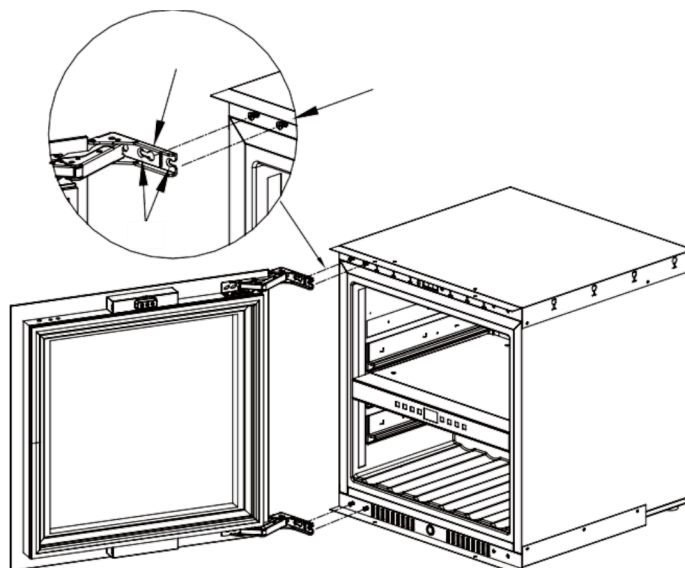

6. Refit the covers on the hinges and over the holes on the right-hand side. The door reversal is now complete.

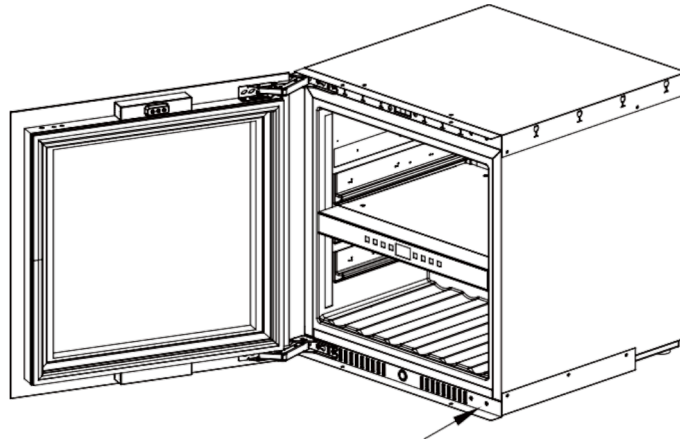

Power supply

Connect the wine cabinet to a single, wall-mounted type E socket.

The wine cabinet must be plugged into its own easily accessible socket.

All questions relating to the power supply and/or earthing must be dealt with by qualified personnel (electrician, authorised service centre).

Location

- Warning! The wine cabinet must be placed in a clean (dust-free), frost-free environment, away from heat sources such as radiators, ovens or sunlight. It must not be installed outdoors.
- Place the wine cabinet in a location strong enough to support its weight when fully loaded.
- To level the wine cabinet, adjust the height of the adjustable feet underneath it.
- This appliance is designed to operate within a specific ambient temperature range, indicated by the climate class on the rating plate.
- When choosing a location for the appliance, make sure that the floor is flat and firm and that the room is well ventilated. This appliance is designed to operate within a specific ambient temperature range, indicated by the climate class on the rating plate. The ambient temperature affects the temperature and humidity inside the wine cabinet. For optimal operation, the settings of the wine cabinet are designed for an ambient temperature of 23–25°C.

The temperature of the appliance can be set between 5°C and 20°C. Wine cabinets with two temperature zones have two independently adjustable compartments: the first can be set between 5°C and 12°C and the second between 12°C and 20°C. The temperature is controlled by a thermostat.

Changing the temperature setting increases energy consumption.

The appliance maintains the set temperature as long as it is operating and used under normal conditions. The temperature inside the appliance and its energy consumption can be affected by many factors: ambient temperature, exposure to sunlight, how often the door is opened, the quantity of bottles stored, etc. Slight temperature fluctuations are perfectly normal and are due to the cooling cycles of the appliance. These fluctuations do not affect the storage temperature of the wine, because they are too short for any heat exchange with the bottles to take place.

We recommend loading the bottles in several stages to allow the internal temperature to stabilise. Once the wine cabinet is fully loaded, it takes between 24 and 48 hours to reach the desired tempera-

ture. This time depends on the initial temperature of the bottles, which must be brought to the desired temperature.

Wi-Fi range

Important: Platinum wine cabinets operate via a Wi-Fi connection.

Important: it is the user's responsibility to ensure that the Wi-Fi network is adequate (speed / signal strength) for the connected wine cabinet to work properly.

- A Wi-Fi amplifier/repeater may be required if the connection speed is low.
- If pairing problems occur, separate 2.4 GHz and 5 GHz networks may be required. In this case, contact your internet service provider to have the two networks separated. The wine cabinet operates on the 2.4 GHz network.

In the event of a power cut, the wine cabinet cannot apply any settings and also loses any settings still waiting to be synchronised with the server. When it restarts after a power cut, the last settings saved in the cloud are used.

Bluetooth range

Important: Platinum wine cabinets use Bluetooth while they are being paired with the Wi-Fi network. In daily use, the wine cabinet communicates only via the Wi-Fi network. The Bluetooth range of the wine cabinet is 1 m maximum with the door closed.


5. OPERATING INSTRUCTIONS

Control panel

PLATINUM wine cabinets are equipped with an electronic control panel with an LCD screen. The control panel is located inside the wine cabinet.

The control panel differs between models with one, two and three temperature zones.

AVI45PLATINUM (one temperature zone)

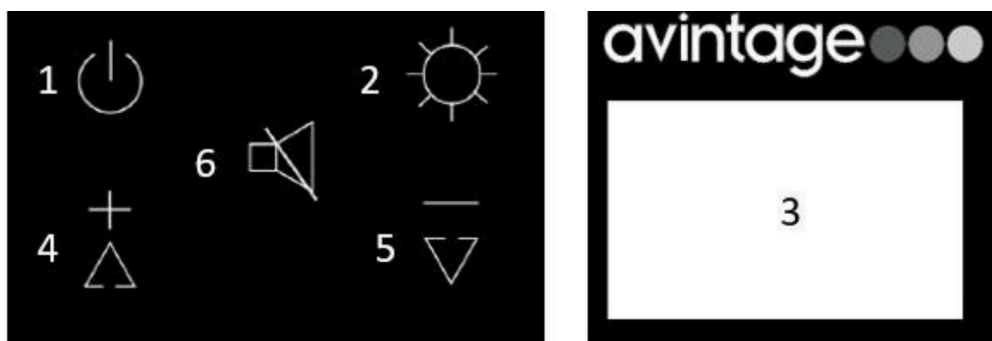

1. Press and hold the button for 3 seconds to switch the wine cabinet on or off.
2. Light button. Press once to select the light intensity. Press and hold for 3 seconds to change the light colour. See 'Lighting modes'.
- 5+6. Press and hold for 3 seconds to lock the control panel.
3. LCD screen. The temperature shown is the set temperature. The actual temperature can be displayed when the control panel is unlocked (see 'Temperature display').
4. Raises the set temperature by 1°C.
5. Lowers the set temperature by 1°C.
6. Press once to switch the audible alarm off or back on.

AVI60PLATINUM, AVI72PLATINUM, AVI78PLATINUM, AVI88PLATINUM, AVI98PLATINUM, AVI105PLATINUM, AVI122PLATINUM, AVI6075PLATINUM (two temperature zones)



1. Press and hold the button for 3 seconds to switch the wine cabinet on or off.
2. Light button. Press once to select the light intensity. Press and hold for 3 seconds to change the light colour. See 'Lighting modes'.
3. Press and hold for 3 seconds to lock the control panel.

4. LCD screen
5. Raises the set temperature by 1°C.
6. Lowers the set temperature by 1°C.
7. Selects the zone whose temperature you want to set.
8. Press once to switch the audible alarm off or back on.

AVI178PLATINUM (three temperature zones)



1. Press and hold the button for 3 seconds to switch the wine cabinet on or off.
2. Light button. Press once to select the light intensity. Press and hold for 3 seconds to change the light colour. See 'Lighting modes'.
3. Press and hold for 3 seconds to lock the control panel.
4. LCD screens (4 = upper zone / 4.1 = middle and lower zones)
5. Raises the set temperature by 1°C.
6. Lowers the set temperature by 1°C.
7. Selects the zone whose temperature you want to set.
8. Press once to switch the audible alarm off or back on.

Temperature setting

To set the temperature of your wine cabinet, unlock the control panel and proceed as follows:

- **Models with one temperature zone:**
 - o Use buttons 4 and 5 to set the temperature between 5°C and 20°C (41–68°F).
- **Models with two temperature zones:**
 - o Select the zone with button 7. The temperature of the selected zone flashes. Use buttons 5 and 6 to set the temperature.
 - Upper zone: 5–12°C (41–54°F)
 - Lower zone: 12–20°C (54–68°F)
- **Models with three temperature zones:**
 - o Select the zone with button 7. The temperature of the selected zone flashes. Use buttons 5 and 6 to set the temperature.
 - Upper zone: 5–20°C (41–68°F)
 - Middle zone: 5–12°C (41–54°F)
 - Lower zone: 12–20°C (54–68°F)

For optimal operation, the temperature difference between two compartments must not exceed 10°C.

Avoid opening the door repeatedly, so as not to disturb your bottles while they are reaching the set temperature.

NOTE: both zones can be set to 12°C at the same time. However, for optimal performance we recommend setting the two zones at least 3°C apart (example: 5°C upper and 8°C lower). The maximum temperature difference between the two zones is 10°C. Always set the colder temperature in the upper compartment and the warmer temperature in the lower compartment (example: 5°C upper and 15°C lower).

Temperature display

The temperature shown on the LCD screen is the set temperature. To display the actual temperature, unlock the control panel and press and hold:

- **Models with one temperature zone:** 4+5+6 for 3 seconds
- **Models with two or three temperature zones:** 2+3 for 3 seconds

The actual temperature flashes for 5 seconds; after 5 seconds, the set temperature is displayed again.

Temperature unit selection (°C / °F)

To change the temperature unit shown on the control panel, lock the control panel and press and hold:

- **Models with one temperature zone:** 4+5 for 3 seconds
- **Models with two or three temperature zones:** 5+6 for 3 seconds

Lighting modes

Your appliance has 3 lighting modes, which you can also control with the Vinotag app. To select the lighting mode directly on the control panel, unlock the control panel and press and hold:

- **Models with one temperature zone:** 2+6 for 3 seconds
- **Models with two or three temperature zones:** 2+8 for 3 seconds

Then use the plus and minus buttons to choose between:

-  Door switch mode: default mode; the light comes on when the door is opened. When the door is open, the door-open icon is displayed and the light is on. When the door is closed, the door-open icon disappears and the light goes out.
-  Automatic light mode: the light comes on automatically when the door is opened and goes out automatically after 15 minutes.
-  Permanent light mode: the light only comes on or goes out when you press button 2 on the control panel or use the switch in the Vinotag app.

Lighting colour

Your appliance has 3 lighting colours, which you can also control with the Vinotag app. To change the lighting colour directly on the control panel, press and hold the light button (2) for 3 seconds. Then use the plus and minus buttons to choose between:

- 'A' Amber
- 'C' Cool white
- 'W' Warm white

Dimmable lighting

Your appliance has 4 light intensity levels, which you can also control with the Vinotag app. To change the light intensity directly on the control panel, briefly press the light button (2). Each press reduces the intensity until the light goes out completely; the next press starts again at 100%.

- Intensity levels: 100%-75%-50%-25%

Door alarm

Your appliance has a door-open alarm, which you can also control with the Vinotag app. A visual and audible alarm is triggered if the door is left open for more than 3 minutes.

To switch off the alarm:

- Press button 6 (one temperature zone) or button 8 (two or three temperature zones)
- Switch on the silent mode switch in the app
- Close the door

Carbon filter alarm

When you switch on your wine cabinet, the countdown for the service life of the carbon filter starts. After 365 days, a visual alarm appears to tell you that it is time to change the carbon filter. See chapter 6 for how to change the carbon filter.

Once the filter has been changed, restart the countdown: unlock the control panel and press and hold:

- **Models with one temperature zone:** 2+5 for 3 seconds
- **Models with two or three temperature zones:** 2+6 for 3 seconds

Energy saving


If no button is pressed for 20 seconds, the screen switches to energy-saving mode and dims, but remains visible.

Connecting to a Wi-Fi network

Use your mobile phone to connect the wine cabinet to a Wi-Fi network.

Open the Vinotag app and create a digital wine cabinet by selecting 'Connected Cellar', then choose your Platinum wine cabinet model from the list.

If you already have a Vinotag account, go to 'MY ACCOUNT', tap 'ADD A CELLAR', select 'Connected Cellar' and choose your Platinum wine cabinet model from the list.

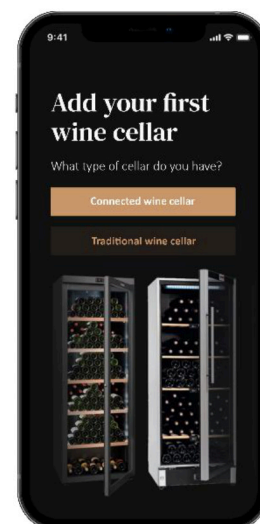

The app connects to your wine cabinet, which must be plugged into a mains socket and correctly installed (see the installation instructions for your wine cabinet). Once the app has detected your wine cabinet, the available Wi-Fi networks are displayed. Select the Wi-Fi network of your choice, or enter

the name of your Wi-Fi network if it is not displayed automatically, and then enter the network password to connect your wine cabinet to the network and control its settings remotely.

When the Wi-Fi icon on the wine cabinet is lit steadily, the Wi-Fi function is on and the wine cabinet is connected to Wi-Fi.

If the Wi-Fi icon is flashing, the Wi-Fi function is on but the wine cabinet cannot connect to the Wi-Fi network. In this case, reset the Wi-Fi of the wine cabinet.

Resetting Wi-Fi

To reset Wi-Fi in the event of a connection problem or if you change your internet router, unlock the control panel and press and hold:

- **Models with one temperature zone:** 2+4 for 3 seconds
- **Models with two or three temperature zones:** 3+5 for 3 seconds

This deletes the original Wi-Fi settings and lets you reconnect to the network of your choice. The Wi-Fi icon then shows that the Wi-Fi function is off.

Switching off Wi-Fi

To switch off Wi-Fi, unlock the control panel and press and hold:

- **Models with one temperature zone:** 4+6 for 3 seconds
- **Models with two or three temperature zones:** 3+6 for 3 seconds

The Vinotag® app

Platinum wine cabinets are compatible with the VINOTAG® wine management app. To use your wine cabinet as a connected appliance, you need:


- A power supply for the wine cabinet
- The VINOTAG® app, downloaded from the App Store or Google Play Store, and a user account
- A stable internet connection (Wi-Fi) within range of the Platinum wine cabinet
- A Platinum wine cabinet

VINOTAG® app functions

The VINOTAG® app lets you:

- Create, customise and manage your wine cabinets
- View your wine inventory (the bottles in your wine cabinet) and create your own wine sheets. As part of its Premium option, VINOTAG® works with VIVINO® to let you import detailed wine sheets from the VIVINO® database.
- Create and view your wine library. The exclusive VINOTAG® - VIVINO® partnership lets you save and view detailed wine sheets from the VIVINO® database
- Share the view of your wine cabinet(s) with family and friends
- Receive alerts about the peak drinking date of your wines, when the filter in your wine cabinet needs changing or when stocks of your favourite wine are running low
- Quickly locate specific bottles in your wine cabinet
- See which spaces are free in your wine cabinet
- Set the temperature of the wine cabinet, control the lighting mode remotely (3 modes available), switch the wine cabinet on or off and mute the audible alarm
- Receive alerts when the carbon filter needs changing or if your wine cabinet develops a fault

Creating a VINOTAG® account

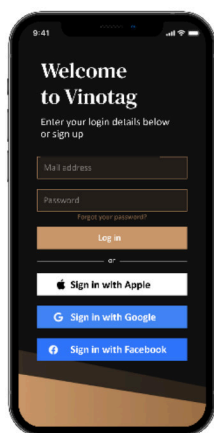

- Download the VINOTAG® app from the App Store or Google Play Store, depending on your phone.
- Create an account manually, via Facebook or with your Apple / Google Play account
- Complete the mandatory fields: First name; Last name; Date of Birth; Country; region
- Tick the box 'I accept the general conditions of use'
- Tap 'Finalize my registration'

You now have a VINOTAG® account. Remember to save your username and password.


VINOTAG® menus

When the app is open, the following menu is displayed:



- **MY CELLAR:** lets you view your wine cabinet(s).
- **MY WINES:** lets you view your wine library.
- **ALERTS:** lets you view the alerts for your wine cabinet.
- **PROFILE:** lets you view and complete the information linked to your account.

'MY CELLAR' page

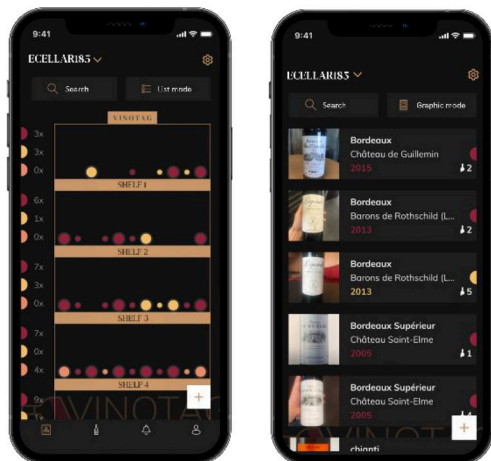

This page lets you view the contents of your wine cabinet(s).

- Important: if your wine cabinet is empty, you cannot view it. You need to add bottles before the wine cabinet view can be displayed.
- The wine cabinet can be displayed in list mode or in graphic mode. To change the mode, use the icon at the top right of the screen; it switches between the two display modes. By default, wine cabinets in the 'Connected Cellar' category are displayed in list mode.

Wine cabinet view icons:



List mode or




Graphic mode

- The search icon  at the top left of the screen lets you search for a bottle of wine in your wine cabinet: simply enter information about the bottle you are looking for (estate name, type of wine, year, etc.).
- The  icon at the bottom right of the screen lets you add bottles of wine (see 'Adding bottles' for more information).
- Important: if you have more than one wine cabinet, you can switch between them by tapping the name of the wine cabinet at the top left of the screen. A pop-up then asks you to select the wine cabinet you want to view. Select it from the list of your wine cabinets.




List mode

- Simplified display mode. A list shows the wines stored in your wine cabinet, in alphabetical order.
- For each wine, list mode shows the name of the wine, its estate, year, colour and type, and a photo of the bottle.
- Tap a wine to open its wine sheet.
- An indicator on the right of the screen shows the type of each wine. Wine types are identified by a coloured dot (red dot: red wine / yellow dot: white wine / salmon dot: rosé wine).

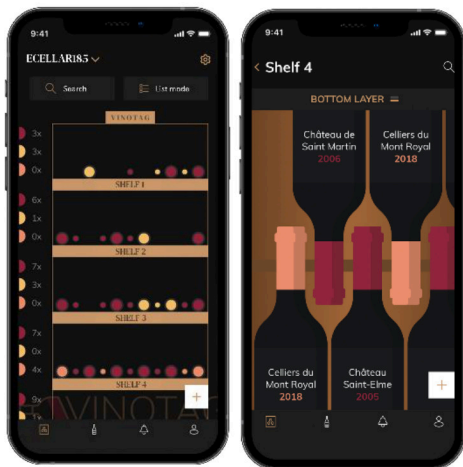

Graphic mode

- A graphic view of the wine cabinet shows how full it is, with the stored bottles represented by coloured dots.
- Wines are sorted by shelf.
- You can view, move or delete bottles.
- Tap a bottle to open its wine sheet.
- An indicator on the left of the screen shows the number of bottles of each wine type on each shelf. Wine types are identified by a coloured dot.

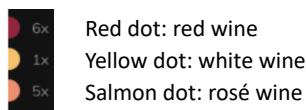


'MY WINES' page

This page lets you view your wine library. In the wine library you can:

- View the wines you have drunk: all wines added to your wine cabinet (whether still there or not) are automatically added to your wine library.
- Create a wishlist: you can save wines you have tasted at friends' homes or that you would like to buy.

- The search icon  at the top left of the screen lets you search for a bottle of wine in your wine library: simply enter information about the bottle you are looking for (estate name, type of wine, year, etc.).
- To add a bottle to your wine library, follow the 'Adding bottles' procedure and tap 'add to my wine library'.
- Tap a wine to view its wine sheet (for more information, see 'Viewing a wine sheet').

'ALERTS' page

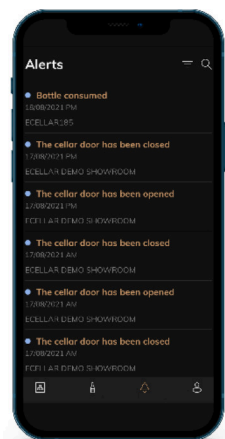

This page lets you view the alerts for your wine cabinet; a red dot next to the icon indicates an unread alert. Alerts are listed in chronological order. If you have several wine cabinets, you can filter by wine cabinet (filter icon at the top left of the screen). A search field lets you filter your alerts to find a specific event.

Temperature / door-open alert: your wine cabinet alerts you when temperature changes require your attention.

Stock alert: you can set stock alerts for a specific wine, based on a quantity you define. The app alerts you when the wine is about to run out (you define the out-of-stock threshold as a number of bottles).

'PROFILE' page

This page lets you view, complete or modify the information linked to your VINOTAG® account:

Modify my information: change your registration details (last name, first name, date of birth, country, region) or delete your account. You can also agree to receive news and other marketing information from VINOTAG.

I become premium: subscribe to the VINOTAG® premium option and buy scan refills. These scans let you save VIVINO® wine sheets directly in the app, so that you no longer have to fill in wine sheets manually (see 'Premium account').

Add cellar: add new wine cabinets.

Enter an invitation code: join wine cabinets that have been shared with you. An invitation code is required to join a wine cabinet; this access code is generated and sent by the owner of the shared wine cabinet.


Contact: contact VINOTAG® customer service; a drop-down list lets you select the subject of your request.

General Conditions of Use: view the VINOTAG® General Conditions of Use.

Legal notices: view the VINOTAG® legal notices.

Disconnect: log out of the app.

Adding a wine cabinet

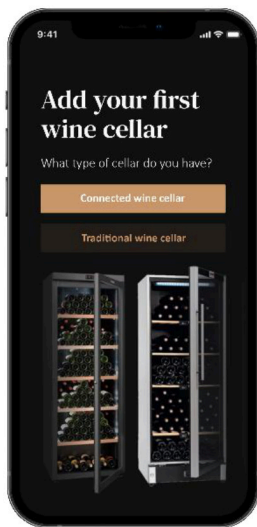


Now that you have a VINOTAG® account, you can add your first wine cabinet or a new one (the app lets you manage several wine cabinets from a selection of models).

Important: never exit the app while you are adding a wine cabinet.

- Adding your first wine cabinet: you must create your wine cabinet when you create your account. Follow the steps below.
- Adding a new wine cabinet: to manage a new wine cabinet from the app, go to the 'profile' → 'my cellars' page and tap the 'add a cellar' button, then follow the steps below.

Adding a 'Connected Cellar'

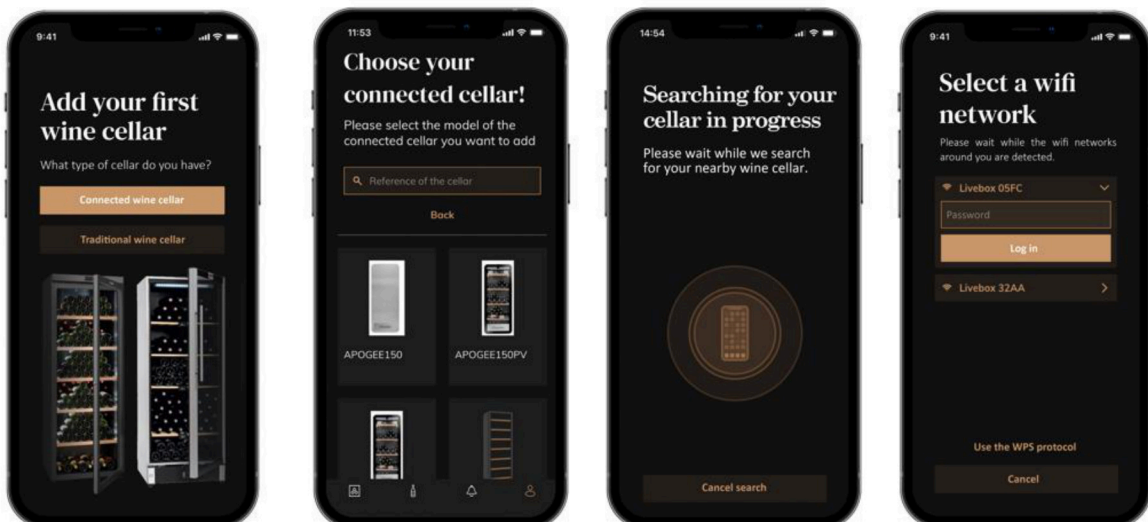


- Select the type of wine cabinet: 'Connected Cellar' or 'not connected cellar'. PLATINUM models belong to the 'Connected Cellar' category. Tap 'Connected Cellar'.
- The app asks you to switch on Bluetooth; this is required to set up the wine cabinet.
- Once your wine cabinet is connected via Bluetooth, the app asks you to select a Wi-Fi network and then to enter the password of your Wi-Fi router. If the Wi-Fi connection fails, check the password and/or the distance between the wine cabinet and the Wi-Fi router. Too great a distance or thick walls can block the connection. Move the wine cabinet closer to the Wi-Fi router so that it can connect, or add a Wi-Fi repeater.

Controlling your wine cabinet

In 'Settings' you can control your wine cabinet:

- Set the temperature of your wine cabinet
- Change the temperature unit from Celsius to Fahrenheit
- Select a lighting mode
- Select the lighting colour and intensity
- Mute the audible alarm
- Reset the carbon filter countdown when a filter change is due
- Switch your wine cabinet on or off
- Reset the Wi-Fi of your wine cabinet
- Share your wine cabinet
- Delete your wine cabinet

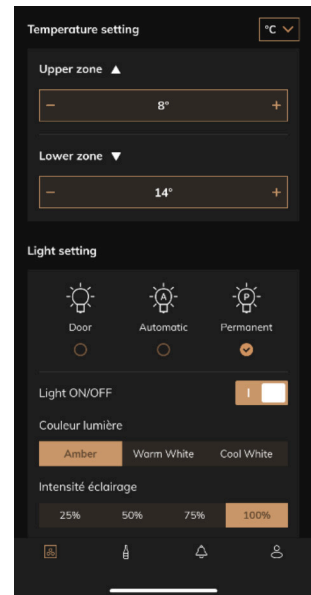

Sharing a wine cabinet

As the owner of a wine cabinet, you can invite other people to join it. To view your wine cabinet, the guest must create a VINOTAG® account.

To invite someone:

- Go to your wine cabinet page and select the 'Settings' icon at the top right
- At the bottom of the page, select 'Share my cellar'
- Then tap the 'Create a code' button
- Send or give this code to the person or people you want to share your wine cabinet with.
- You can create new access codes to share the contents of your wine cabinet with other members.

When you share your wine cabinet:

- The 'Alerts' page tells you when a member has joined your wine cabinet.
- You can remove access at any time: the 'Share my cellar' tab lists the users who have access. Simply tap the bin icon next to the name of the member whose access you want to remove.

To access a wine cabinet that has been shared with you:

- When you are invited to join a wine cabinet, go to the 'my profile' page and select 'enter an invitation code'. Enter the invitation code you received and tap 'join'. You now have access to the shared wine cabinet.
- You can leave a shared wine cabinet at any time: select the wine cabinet you no longer want to view and tap the 'Leave this cellar' button.

Deleting a wine cabinet

- To delete one or more wine cabinets:
- Go to the 'my cellar' page
- Your wine cabinets are listed in the drop-down menu at the top left of the page
- Select the wine cabinet you want to delete, go to 'Settings' at the top right and select 'Delete cellar'.
- Repeat for each wine cabinet you want to delete.

Important: if the wine cabinet contains at least one bottle, a pop-up asks you to confirm this action. Once a wine cabinet has been deleted, the related information cannot be recovered.


Important: you cannot delete a wine cabinet that does not belong to you. If a wine cabinet has been shared with you and is therefore visible on the 'my cellars' page, you can stop sharing it. If you are not the owner, the 'Delete' button is replaced by an 'Exit' button, which lets you leave the wine cabinet. A pop-up asks you to confirm the action.

Changing the wine cabinet configuration

If you want to change the configuration of your wine cabinet from its standard configuration, go to the 'Settings' of your wine cabinet and then 'Information/Shelves' to remove or add shelves.

Adding bottles

Once you have created your wine cabinet in the VINOTAG® app, you can add bottles.

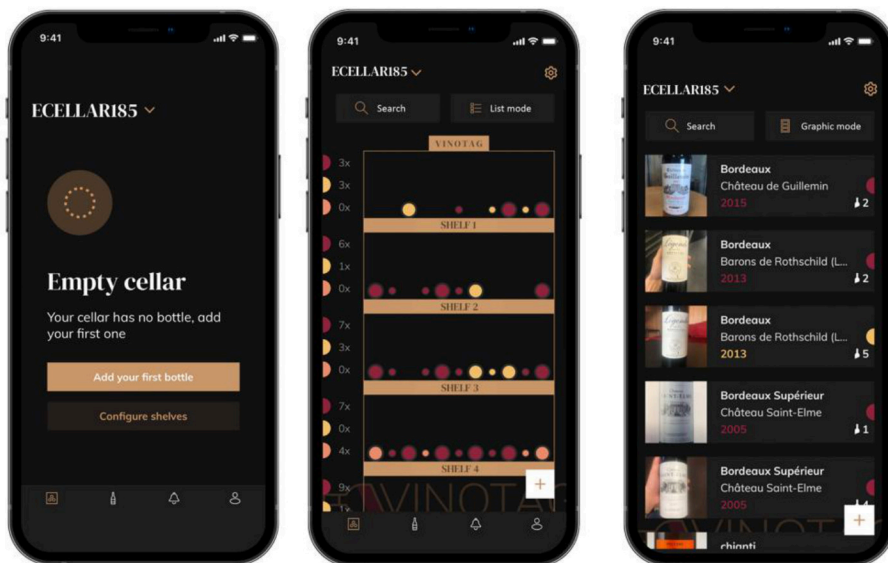

Creating a wine cabinet

List mode

Graphic mode

- o Tap 'add my first bottle' (new wine cabinet) or '+'. Take a photo of the label of the bottle you want to add to your wine cabinet. A completed wine sheet appears; this sheet comes from the VIVINO® database. You can edit or complete this wine sheet.
- o Important: if the scanned bottle is not in the VIVINO® database or if you do not have a premium subscription, you will have to fill in the wine sheet for your bottle manually. You can also choose not to photograph the label; in this case, you will not have access to the VIVINO® database and will have to fill in the wine sheet for your bottle manually.
- o When adding a bottle, you can complete or edit the associated wine sheet, add a comment about the wine, save it as a favourite or give it a rating. If you fill in a wine sheet manually, you can complete the following fields:
 - o Wine name
 - o Estate
 - o Appellation
 - o Year
 - o Country / region
 - o Colour
 - o Number of bottles

- o An 'advanced' mode lets you add further information, such as:
 - o Minimum ageing time (years)
 - o Maximum ageing time (years)
 - o Comment
 - o Add to favourites
 - o Rate the bottle (0 to 5)
 - o Purchase price
 - o Link to VIVINO® to find the complete wine sheet (Premium option)
 - o Link to VIVINO® to buy this wine

Bottle not recognised: if the scanned bottle is not recognised, the app offers to repeat the scan, to search for the bottle manually or, if no matching bottle is found, to fill in the wine sheet manually.

You must enter a minimum and a maximum ageing time to receive peak drinking date alerts. If the minimum and maximum ageing time fields are not completed, no peak drinking date alerts will be sent.

Once the bottles have been identified, the app lets you keep a digital record of your wines. Record the location of your actual bottles in your digital wine cabinet to keep your digital wine record up to date.

You can also add a bottle from a wine sheet:

- Tap the 'add one or more bottles' button at the bottom of the page
- Enter the number of bottles to add.
- Place the bottle(s) in the desired location(s) in your wine cabinet.
- Record these locations in VINOTAG®.

PLEASE NOTE: when you create a VINOTAG® account, you receive '50 free scans'. When you add a connected wine cabinet, you are given 50 scans. These scans give you pre-completed wine sheets thanks to the VINOTAG® - VIVINO® partnership. Once all the free scans have been used, you can continue to add bottles by filling in their wine sheets manually, or subscribe to the premium option to buy scan refills (see 'Premium account').

ESOMMELIER® function

When you add a bottle to a connected wine cabinet, you can use the ESOMMELIER® function. This function recommends the ideal location for storing your wine. When you scan a bottle, VINOTAG® identifies the type of wine; storage temperatures for optimal preservation are recommended according to the type of wine.

Some locations in your wine cabinet are therefore better suited to certain types of wine.

The ESOMMELIER® function helps you store your wine in the best conditions. When you tap this button, available locations suitable for the scanned bottle are suggested; special icons mark these locations in the digital view of your wine cabinet.

Premium account

VINOTAG® works with VIVINO® to make the app easier to use. When you create a VINOTAG® account, you receive a number of 'free scans'.

A 'free scan' means taking a photo of a bottle to access a detailed wine sheet from the VIVINO® database directly. Important: unrecognised bottles are counted as a 'free scan', because the recognition

request has been sent to VIVINO®. The photo must be sharp enough and of sufficient quality for the bottle to be recognised.

This wine sheet can be edited and saved directly in the digital version of your wine cabinet, so you no longer need to fill in your wine sheet manually. This saves a lot of time when filling your wine cabinet and gives you access to a wealth of information about your favourite wines.

Once all the free scans have been used, you can continue to add bottles by filling in their wine sheets manually, or subscribe to the premium option to buy scan refills. A pop-up tells you when you have used up your 'free scans'.

To switch to a premium account, subscribe to the premium option, which lets you buy scan refills:

- Refill 200 scans
- Refill 400 scans
- Refill 1000 scans

Purchased scans can be used with no time limit.

Information on subscribing to the premium option and on prices is available in the VINOTAG® app: go to the 'my account' area and tap the 'I become premium' button.

Removing bottles

Once you have created your wine cabinet in the VINOTAG® app, you can remove bottles from it. The bottles will remain in your wine library.

When you drink a bottle, delete it from the app to keep your wine record up to date.

Viewing a wine sheet

You can view wine sheets from your wine cabinets or from your wine library.

Viewing a wine sheet in list mode or in your wine library:

- Tap the bottle of your choice
- View the information about your bottle
- For more details, visit the website of our partner Vivino by tapping 'See on Vivino'

Viewing a wine sheet in graphic mode:

- Tap the shelf of your choice
- Tap the bottle of your choice
- View the information about your bottle
- For more details, visit the website of our partner Vivino by tapping 'See on Vivino'

Creating peak drinking date alerts

To create peak drinking date alerts, you must enter a minimum ageing time (greater than 0) and a maximum ageing time on the wine sheet. Ageing times are expressed in years. You will receive an alert at the start and at the end of the peak drinking period if the bottle has not been drunk. For example, a wine of vintage 'X' with a minimum ageing time of 5 years and a maximum ageing time of 10 years will generate the following alerts:

- Vintage 'X' + 5 years: start of peak drinking period alert 'Your bottle is ready to be tasted'
- Vintage 'X' + 10 years: end of peak drinking period alert 'Your bottle is at the end of its peak date'

Creating stock alerts

To help you manage your wine cabinet and your wines, VINOTAG® lets you set up stock alerts:

- In the wine cabinet view in the app, tap the bottle you want to open its wine sheet
- Tap 'schedule an alert'
- Enter the number of remaining bottles at which you want to receive a stock alert
- Confirm your entry. The stock alert is now activated.

To deactivate a stock alert, tap 'modify alert' and reduce the number of bottles until 'deactivate' is shown. Confirm your entry. The stock alert is now deactivated.

Locating your bottles in the wine cabinet

- In the wine cabinet view, use the search icon at the top left of the screen
- Enter the name of the wine and/or the estate and/or other information about the bottle
- The wine sheet of the bottle is displayed
- Tap the 'See my bottles' button at the bottom of the page or the 'Position in the cellar' button at the top of the wine sheet

6. CLEANING AND MAINTENANCE

Before cleaning the appliance (which should be done regularly), disconnect it from the mains by unplugging it or by removing the fuse of the circuit it is connected to.

Before using the appliance for the first time, and regularly thereafter, we recommend cleaning the inside and outside (front, sides and top) with a mixture of lukewarm water and a mild detergent. Rinse with clean water and allow to dry completely before plugging the appliance back in. Do not use solvents or abrasive cleaners.

When the appliance is switched on for the first time, there may be a residual odour. If so, run the appliance empty for a few hours at the coldest temperature setting. The cold will eliminate any odour.

Automatic defrosting

Your wine cabinet defrosts automatically. Defrosting has no effect on the wines stored in the wine cabinet. During defrosting, the compressor and the fans are switched off.

Changing the carbon filter

Your wine cabinet is fitted with a carbon filter, which we recommend replacing once a year. To replace it, simply pull it out from inside the wine cabinet and fit a new filter.

If you go on holiday


- Short absences: leave your wine cabinet running if you will be away for less than 3 weeks.
- Long absences: if the appliance will not be used for several months, remove all bottles and accessories, switch the appliance off and unplug it. Clean and dry the inside and outside of the appliance thoroughly. Leave the door open, wedging it open if necessary, to prevent condensation, odours and mould.

If you need to move your wine cabinet

- Unplug the wine cabinet before doing anything else.
- Remove all bottles from the wine cabinet and secure any moving parts.
- To avoid damaging the levelling screws of the feet, screw them fully into their base.
- Close the door completely.
- Preferably move the appliance in an upright position; otherwise, check the markings on the packaging to see on which side the appliance can be laid. Also protect the appliance with a blanket or similar cloth.

How to change the activated carbon filter

1. Using pointed pliers, grip the carbon filter at positions A and B. Turn the pliers clockwise until A and B are horizontal, then pull to remove the carbon filter.
2. To fit the new carbon filter, grip it at positions C and D with pointed pliers.
3. To secure the new filter, turn the pliers anticlockwise until C and D are at approximately 45 degrees to the vertical (as shown in the last illustration).

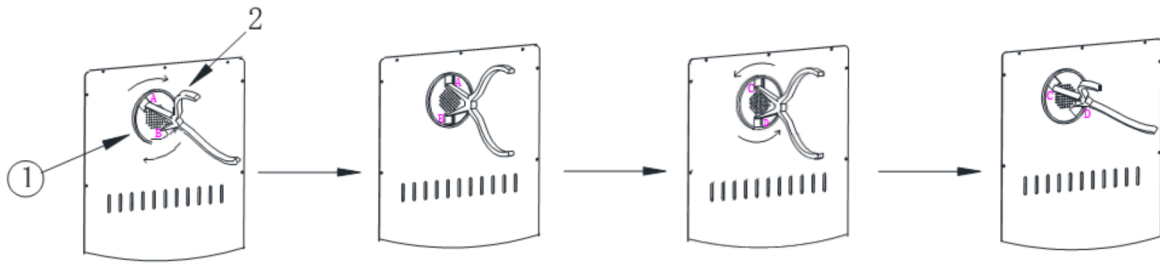

7. IN THE EVENT OF A FAULT

Despite the care we take in manufacturing our products, a fault can never be completely ruled out. Before contacting your retailer's after-sales service, please check that:

The appliance is properly plugged in

There is no power cut

The fault is not one of those described in the table at the end of this manual

IMPORTANT: if the power cable supplied is damaged, it must be replaced by the manufacturer, a service centre approved by the brand or the retailer. In all cases, it must be replaced by qualified personnel to avoid any risk of injury.

IF THESE CHECKS DO NOT SOLVE THE PROBLEM, CONTACT YOUR RETAILER'S AFTER-SALES SERVICE.

CAUTION!

Unplug the appliance before carrying out any maintenance or repair work.

8. TROUBLESHOOTING

Many problems can be solved easily, saving you the cost of a call to the after-sales service. Try the suggestions below before contacting the after-sales service.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
The wine cabinet does not work	The appliance is not plugged in. The appliance is switched off. The circuit breaker has tripped or a fuse has blown.
The wine cabinet is not cold enough	Check the temperature setting. The surrounding conditions may require a higher setting. The door is opened too often. The door is not closed properly. The door seal does not seal properly.
The appliance switches on and off frequently	The ambient temperature is higher than normal. A large number of bottles have been added to the wine cabinet. The door is opened too often. The door is not closed properly. The temperature is not set correctly. The door seal does not seal properly.
The interior light does not work	The appliance is not plugged in. The circuit breaker has tripped or a fuse has blown. The light is faulty. The light has been switched OFF with the light button. Check which lighting mode you have selected in the app or in the appliance menu.
Vibrations	Check that the wine cabinet is level.
The wine cabinet seems too noisy	A clicking noise may be caused by the flow of refrigerant; this is normal. At the end of each cooling cycle, you may hear gurgling noises caused by the refrigerant flowing through the wine cabinet. Contraction and expansion of the inner walls can cause popping and crackling noises. The wine cabinet is not level. In 'mono' mode, the fans of the wine cabinet run to circulate the air inside the wine cabinet.
The door does not close properly	The wine cabinet is not level. The door seal is dirty or damaged. Some of the contents are preventing the door from closing. The door hinges are loose. The shelves are not in the correct position.
The app does not recognise the label of the wine I am photographing	The photo taken with the app must be of good quality (not blurred) and taken so that the wine label fills the white frame in the app. If it still does not work, try taking a close-up photo of the wine name only.

Error codes

The following error codes may appear on the screen or in the Vinotag app.

AVI45PLATINUM: E1/ E3/ E5/ E7

AVI60PLATINUM/AVI72PLATINUM/AVI88PLATINUM/AVI105PLATINUM/AVI122PLATINUM: E1/ E2/ E3/ E4/ E5/ E6/ E7/ E8

AVI178PLATINUM: E1/ E2/ E3/ E4/ E5/ E6/ E7/ E8 / H1 / H2 / H3 / H4

In this case, switch off and unplug the appliance, contact your retailer's after-sales service and tell them the code displayed on the screen.

If any other code is displayed on the screen, please also contact the after-sales service and give them the code displayed.

9. ENVIRONMENT

This appliance is marked in accordance with European Directive 2019/290/EU on waste electrical and electronic equipment (WEEE). By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The crossed-out wheeled bin symbol on the product or on the documents accompanying it indicates that this appliance must not be treated as household waste. Instead, it must be taken to an appropriate collection point for the recycling of electrical and electronic equipment or, if you buy an equivalent product, to the retailer of the new product.

The user is responsible for taking the appliance to an appropriate collection facility at the end of its service life. Separate collection of disused appliances for recycling, treatment and environmentally compatible disposal helps to prevent possible negative effects on the environment and health and promotes the recycling of the materials of which the product is made.

When the appliance is disposed of or resold, the user's personal data is protected without any action on their part. This data is not stored in the wine cabinet but on an external server. No information transmitted during normal use of the wine cabinet can be used after the appliance has been disposed of.

If the appliance is resold, the new user must scan the QR code of the main unit and follow the mandatory pairing procedure. This procedure overwrites the data previously stored on the server, so the new user starts with a blank account. The previous user will no longer be able to access or view their old information in the Vinotag app.

For more detailed information about the treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.

10. DISCLAIMER

As we are continually improving our products for the benefit of our customers, we reserve the right to modify technical specifications without notice.

Warranties for AVINTAGE brand products are provided exclusively by selected retailers. Nothing in these instructions may be construed as an additional warranty.


FRIO ENTREPRISE cannot be held liable for technical or editorial errors or omissions in this document.

This document is not contractually binding.

Capacity


For models AVI88PLATINUM, AVI98PLATINUM, AVI105PLATINUM, AVI122PLATINUM and AVI178PLATINUM, if you remove one shelf, you can display bottles at the bottom of the wine cabinet.

AVI45PLATINUM

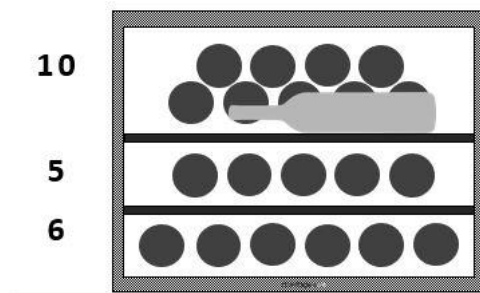


21

AVI60PLATINUM

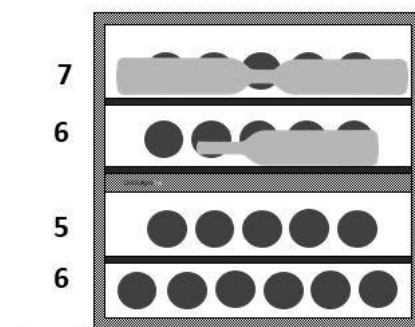


24

AVI72PLATINUM

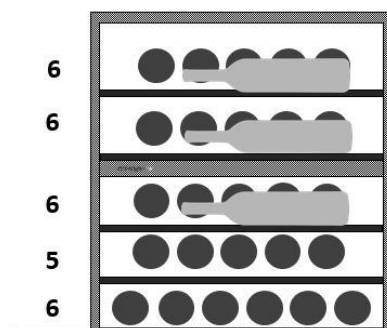


29


AVI78PLATINUM

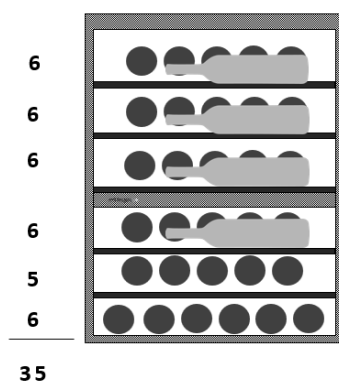


AVI88PLATINUM (with and without bottle display at the bottom)

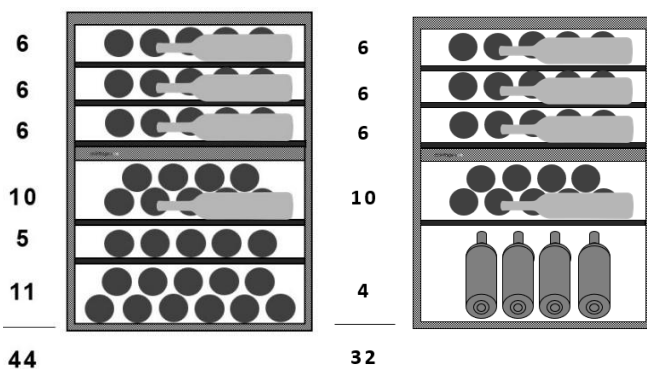


AVI98PLATINUM (with and without bottle display at the bottom)

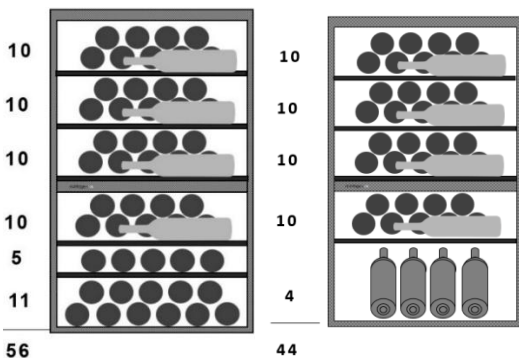


AVI105PLATINUM (with and without bottle display at the bottom)

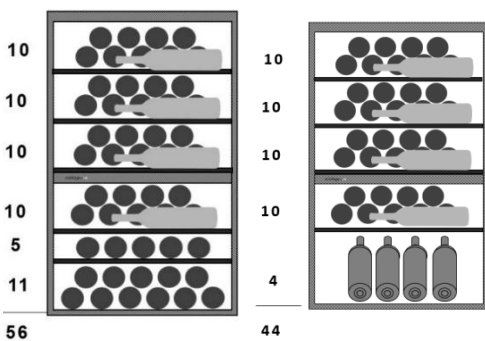


AVI122PLATINUM (with and without bottle display at the bottom)

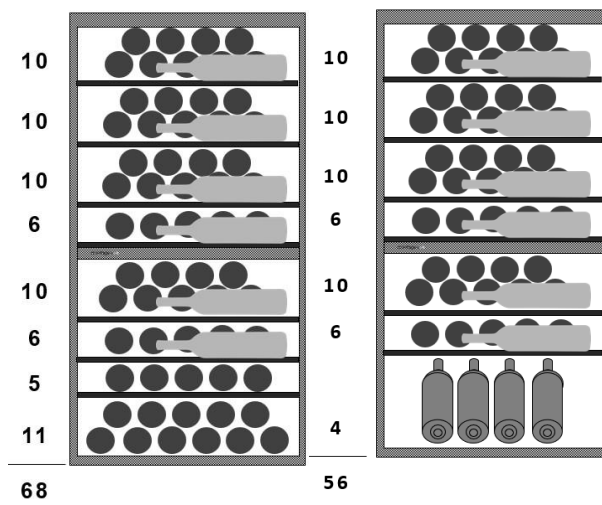

AVI178PLATINUM (with and without bottle display at the bottom)

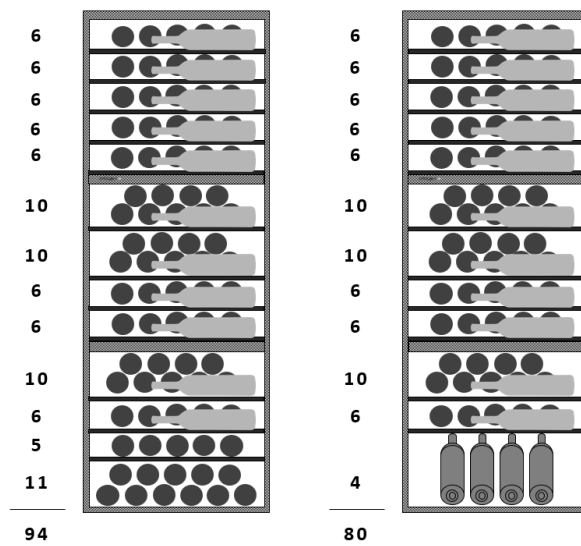

AVI6075PLATINUM

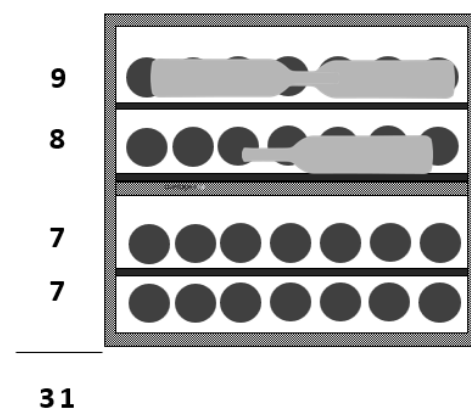

Installation diagrams


Important: installing your wine cabinet

If your wine cabinet is installed above or below a heat source, such as an oven or a microwave, this may cause condensation and increase energy consumption.


For the PLATINUM range, we recommend separating the niches of the two appliances properly, to limit the effect of heat on the wine cabinet and to ensure that it operates correctly.

When installing in an appliance column, it is therefore preferable to install the wine cabinet below the cooking appliance whenever possible.


AVI45PLATINUM

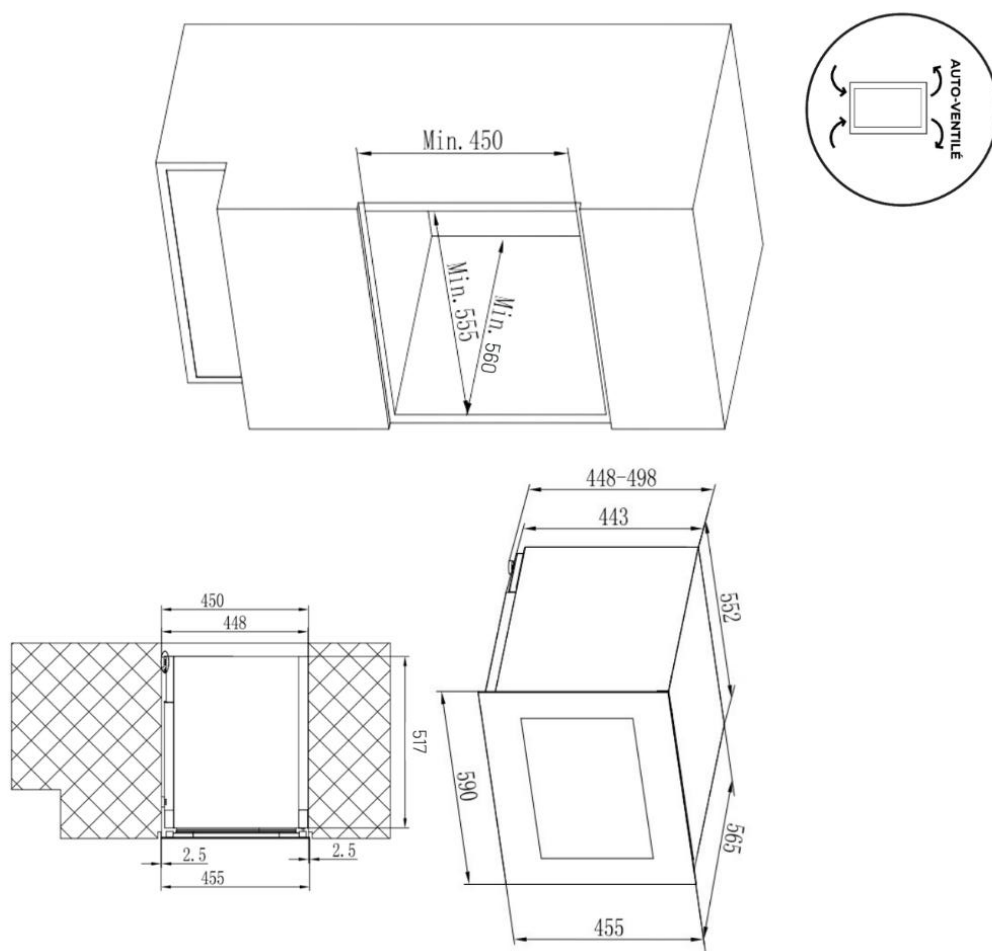





AVI60PLATINUM

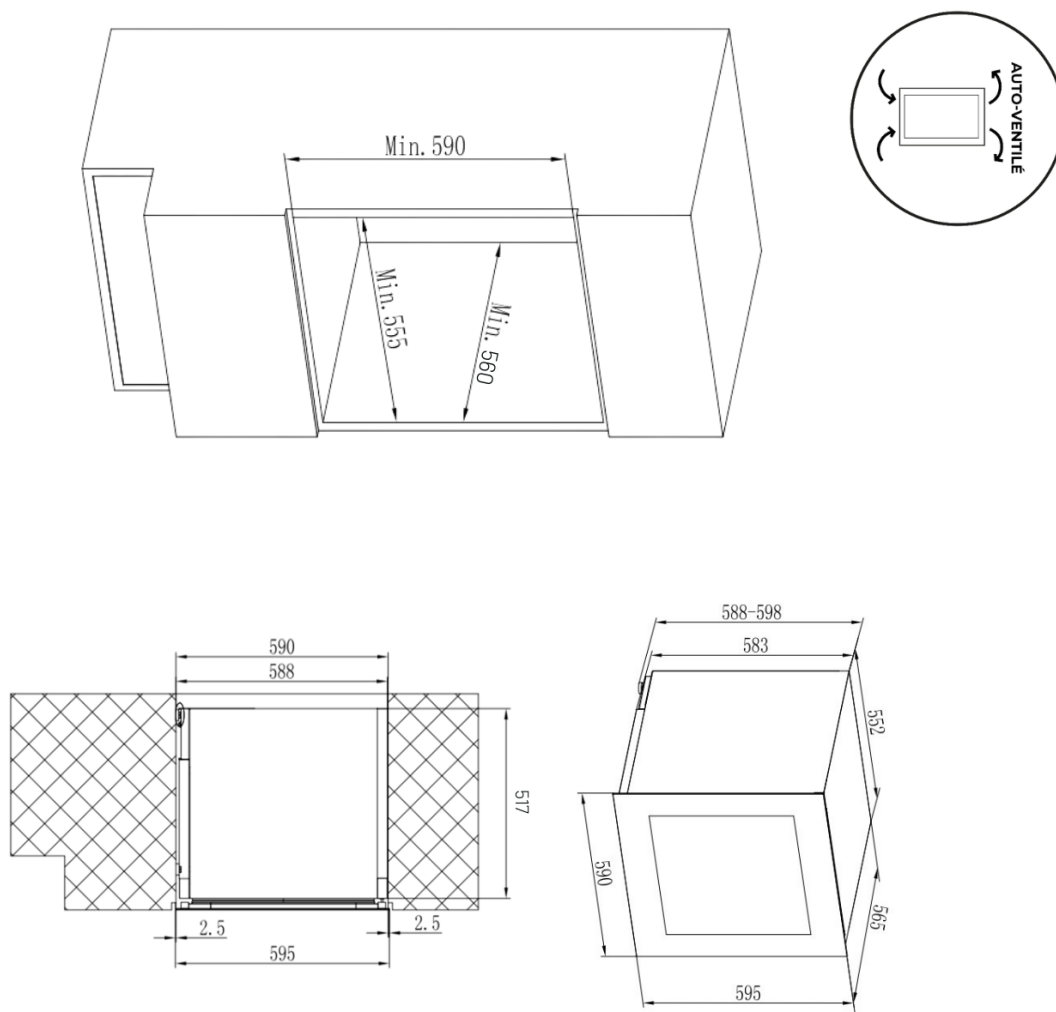


AVI72PLATINUM (specific to built-under installation)

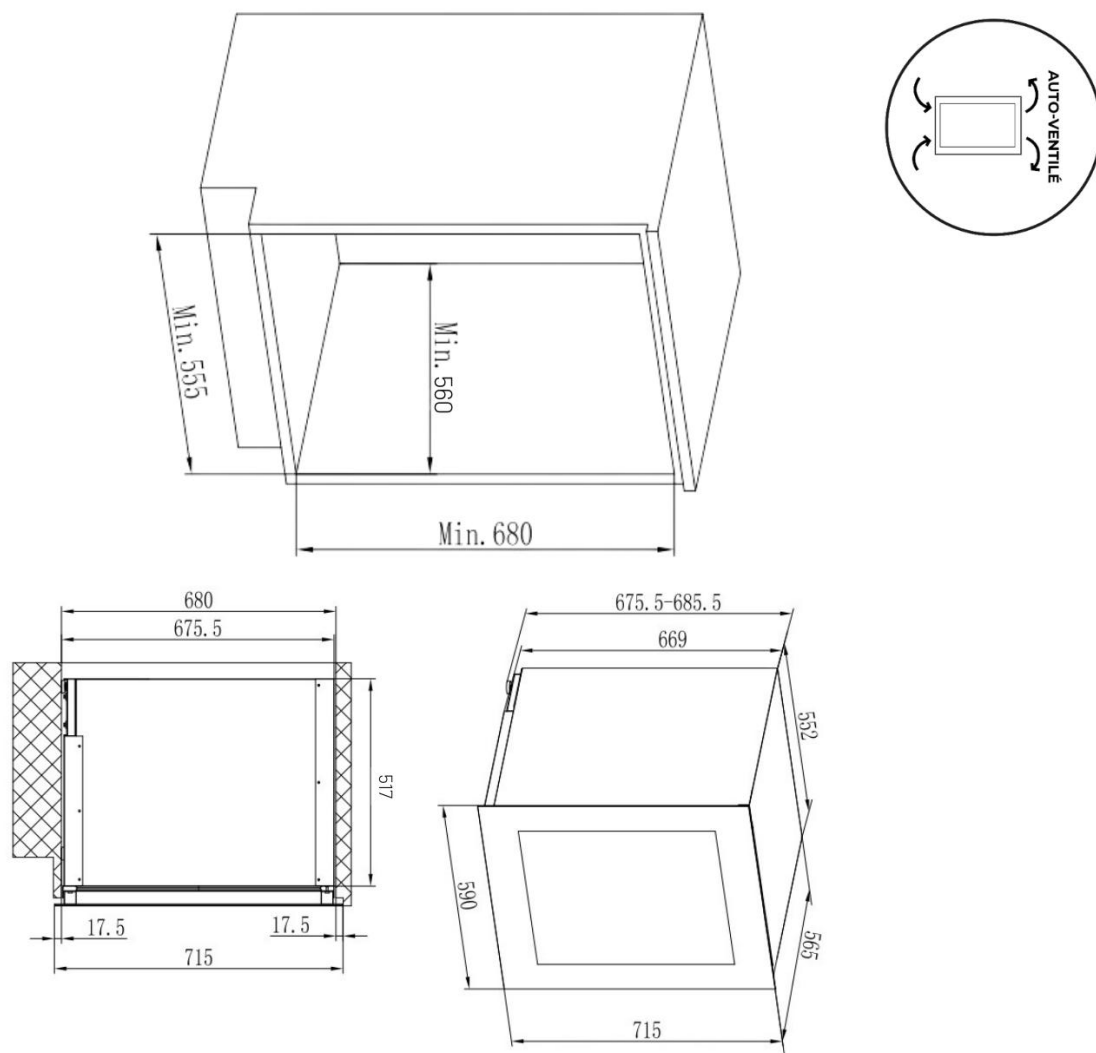


AVI78PLATINUM (specific to built-under installation)

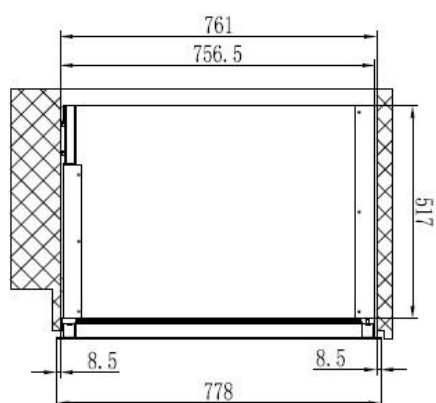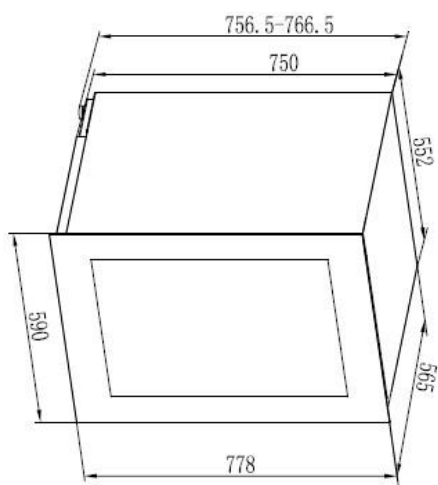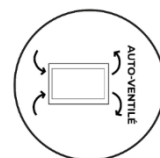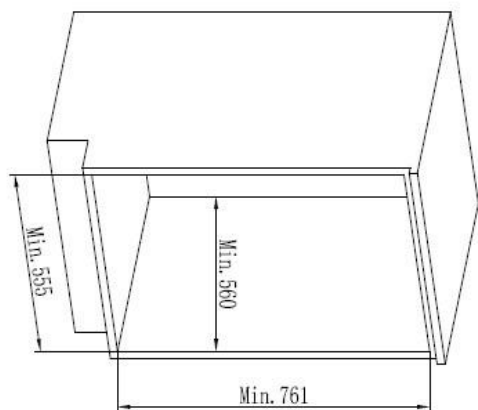


AVI88PLATINUM

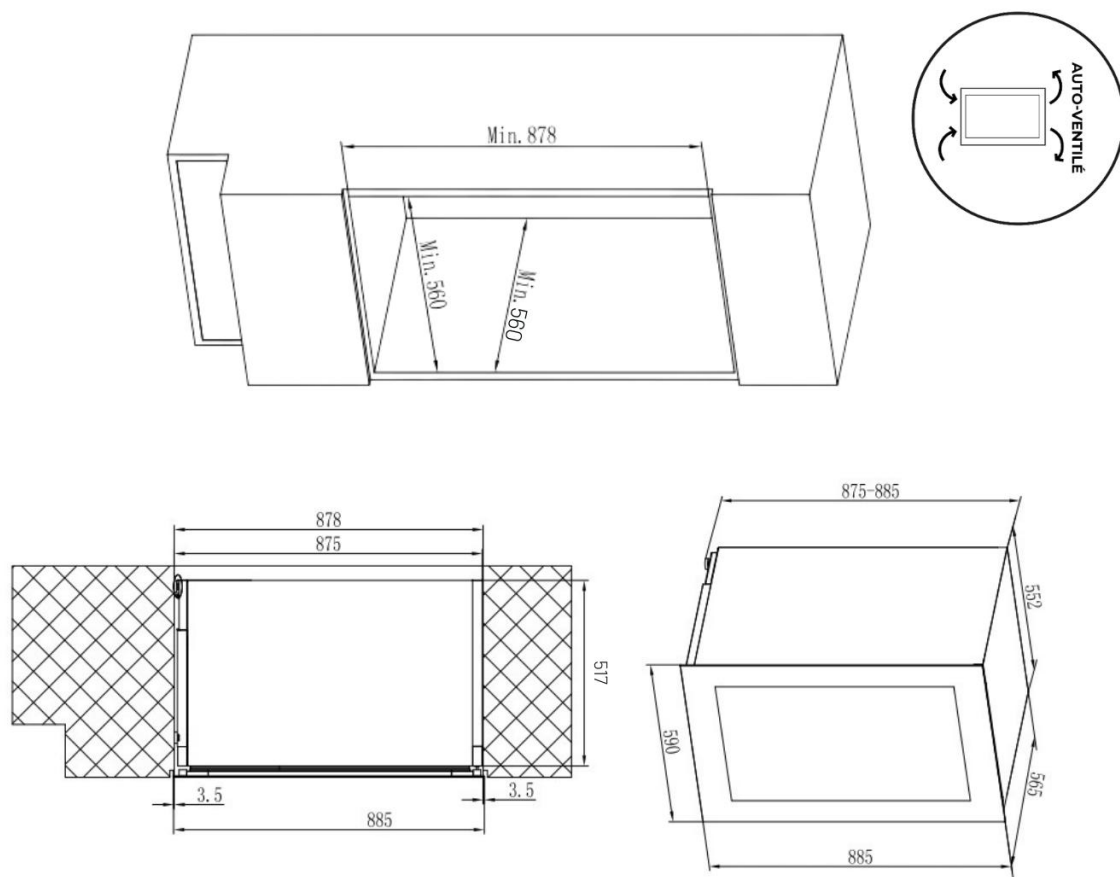


AVI98PLATINUM

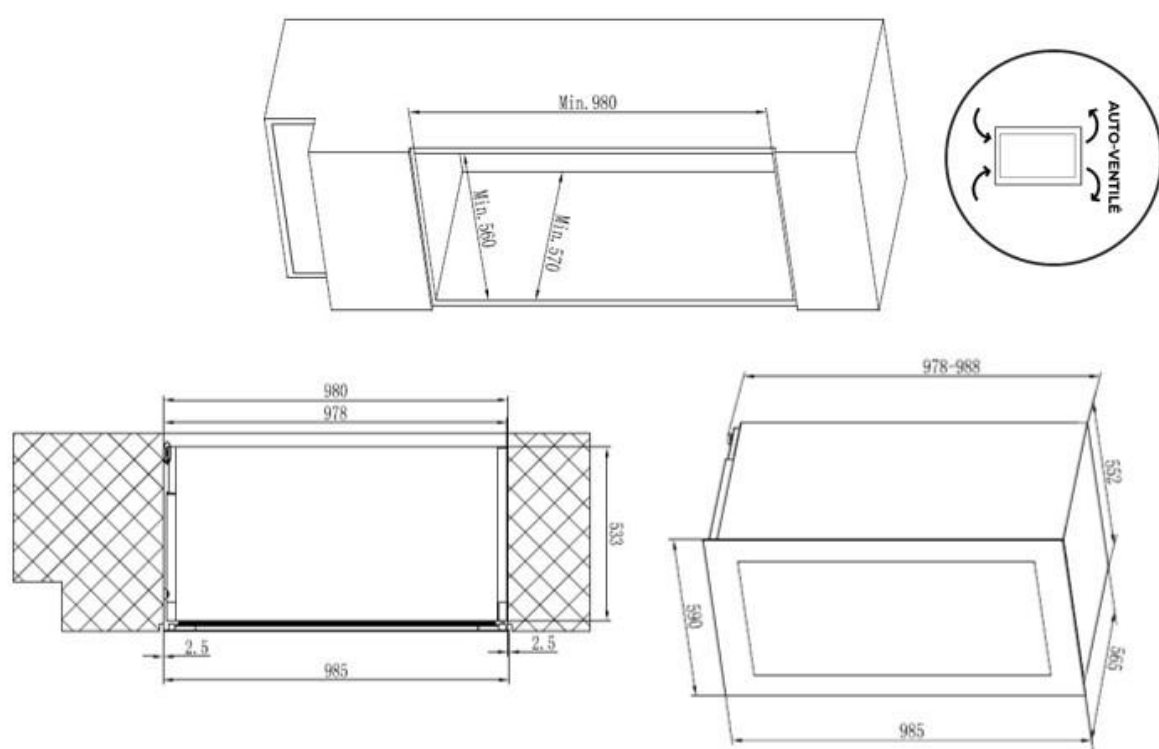





AVI105PLATINUM

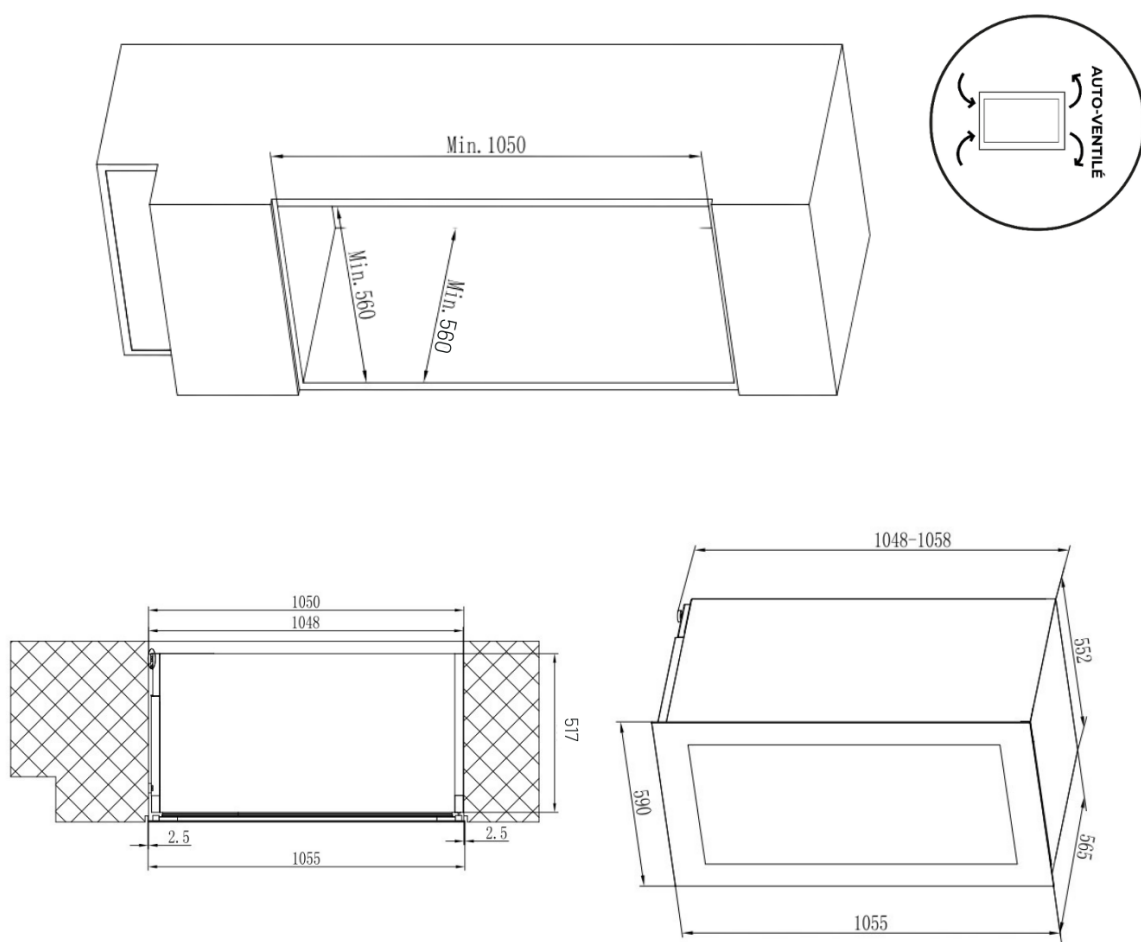





AVI122PLATINUM

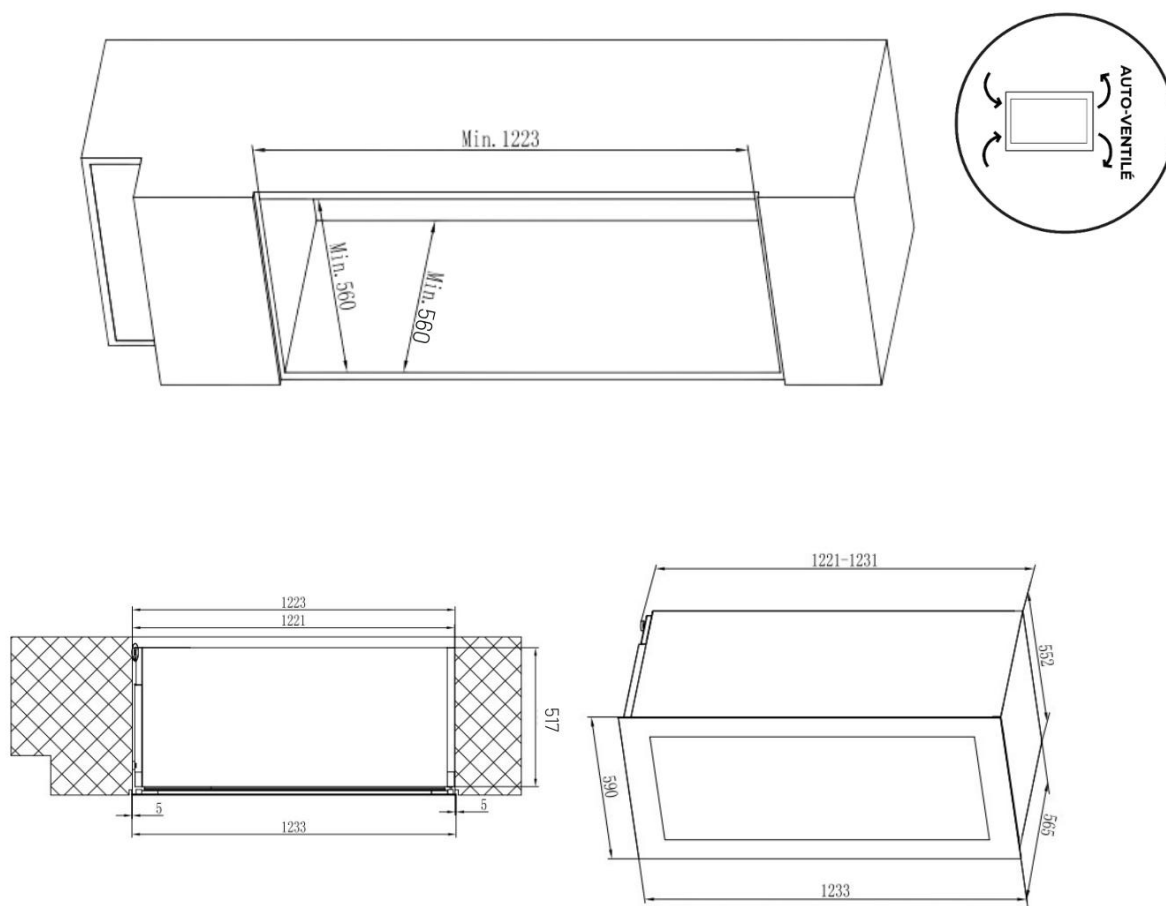

AVI178PLATINUM

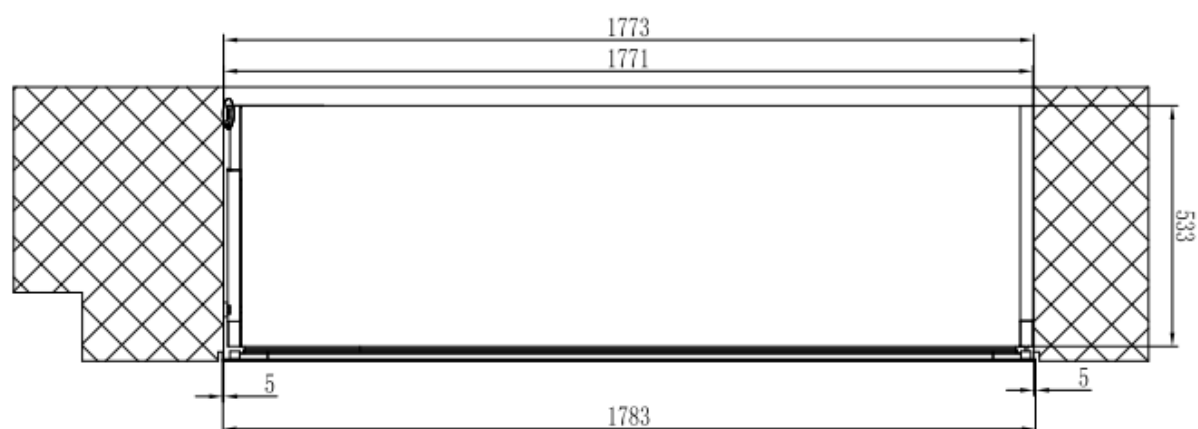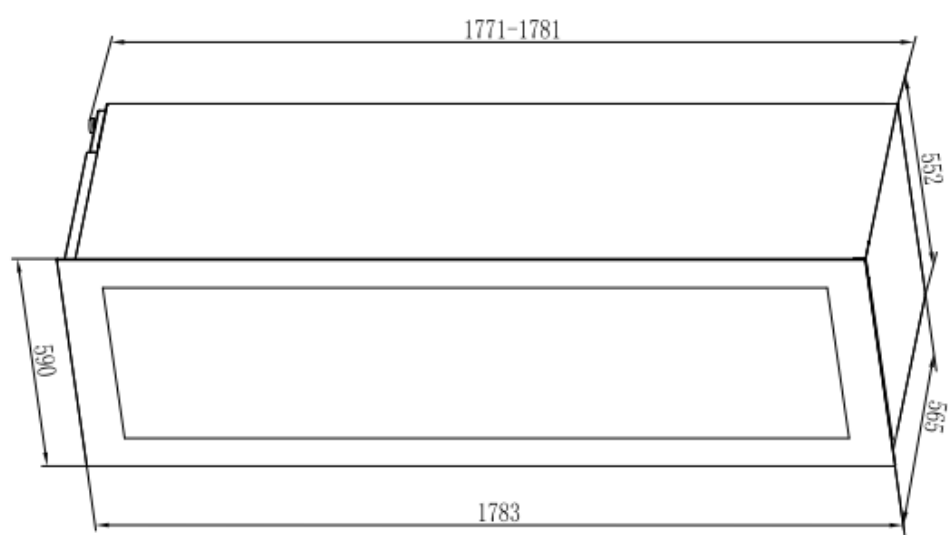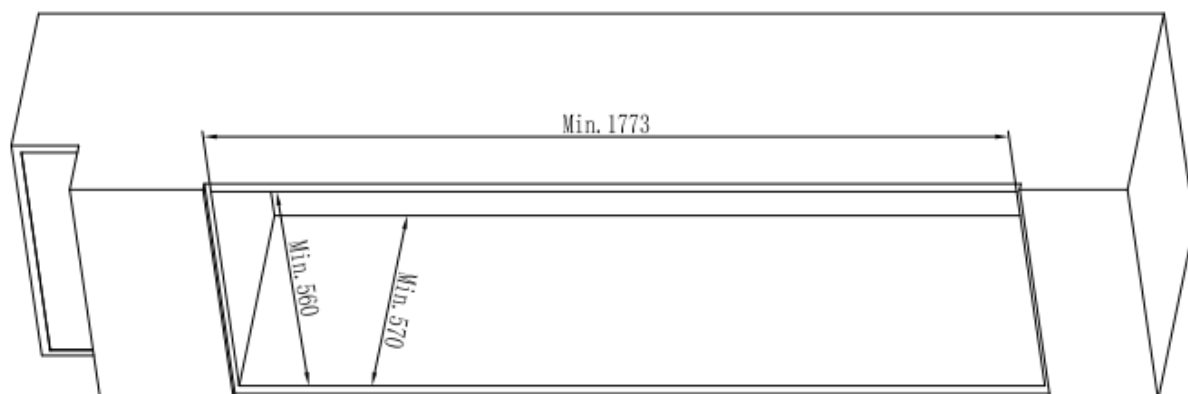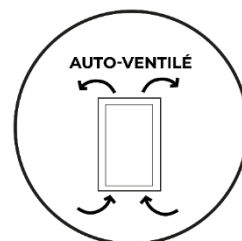

AVI6075PLATINUM

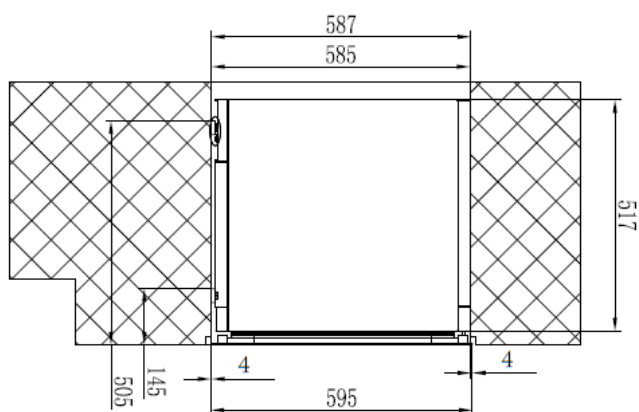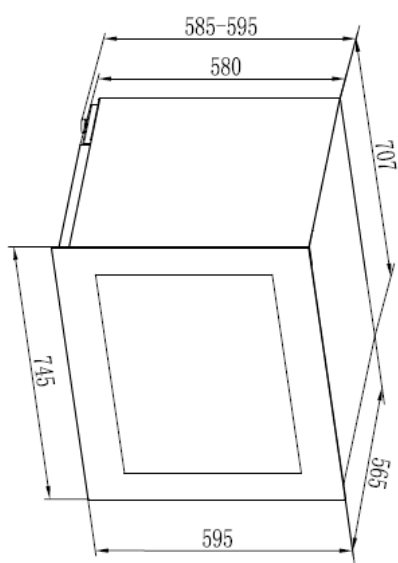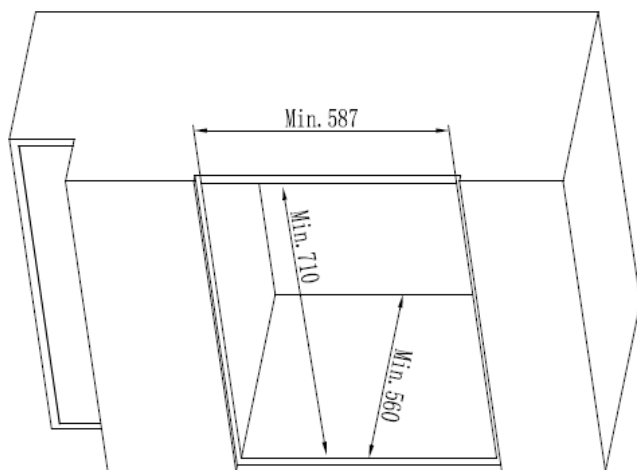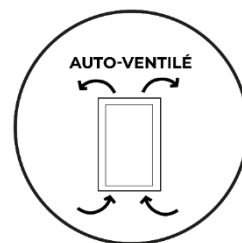

Your Economic Operator contact is:

FRIO ENTREPRISE

143 Boulevard Pierre Lefaucheux

72230 ARNAGE

Tel: 02 43 21 69 80

Mail: Operateur@groupefrio.com



www.avintage.com